


Richmond Ravens Timekeeper Instructions – MINORU STADIUM

Set-up (If turned OFF) ON / OFF SWITCH—right side of unit DO YOU WANT TO START WHERE No TURNED OFF LAST? ENTER MODEL NUMBER DO YOU WANT TO USE PENALTY TIME OUT? Setting Warm-up and Period Time Warmup or Period time, include leading zero for under




USE ATTACHED SWITCH TO START AND STOP CLOCK

Entering Scores

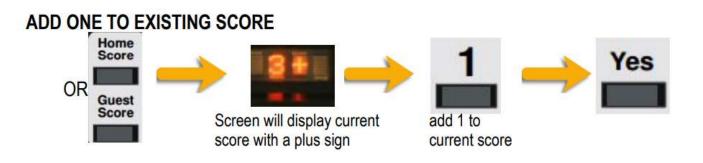


ENTER ACTUAL SCORE (this method replaces whatever current score is displaying)

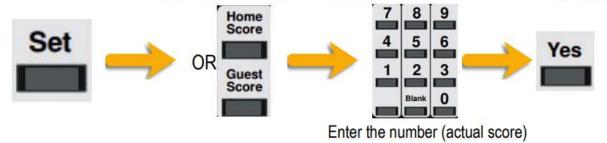

Penalties

The clock must be stopped to enter a penalty. You must use a different player number for each penalty.

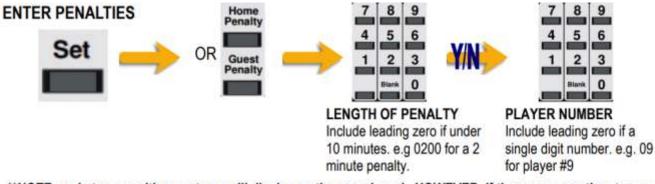

**NOTE: only two penalties per team will display on the scoreboard. HOWEVER, if there are more than two, enter them following the same instructions. As the older penalties expire, the other ones will display.

To Clear Penalty

- 1. Press HOME PENALTY or GUEST PENALTY until the correct penalty is shown on the red display screen.
- 2. Press PENALTY CLEAR to remove the penalty being shown on the red display screen.

