



Richmond Ravens Timekeeper Instructions - RIC

Set-up (If turned OFF)

Turn on switch on right side on control panel.

Does the red screen say the wrong rink's name?

Then press SCROLL PROFILES until the display shows the name of the rink you are on.

Press YES button.

To Set Time

Press SET → TIME = [0][5] YES (for 5 minutes)

Press SET → TIME = [1][0] YES (for 10 minutes)

Intermissions: 1 minute

Press SET → TIME = [0][1] YES (for 1 minute)

To Set Period Number

Press PERIOD then the number of the period desired, 1, 2 or 3

Starting Game

To start the clock counting down, turn hand held unit to on

To stop the clock counting down, turn the hand held unit to OFF

BE CAREFUL not to hit the HORN button

*May need to toggle switch twice

Hand Held Switch



Two Position Switch

- Right is Time On Left is Time Off

Horn Switch

- Press to sound horn
- Release to silence the horn
- Horn will sound for up to 4 seconds

Indicator Light

- Flashes when connected to a powered up MPCW-7

Goals

Adding to Score



Enter 1 for the first goal

Press HOME/GUEST SCORE and 1 for the second goal

Press HOME/GUEST SCORE and 1 for the third goal, etc.

If you need to fix the score

Setting Score



Enter the correct number and then press YES.

Penalty

The clock must be stopped to enter a penalty.

You must use a different player number for each penalty.



Enter the player number. It must be 2 digits. Ex. For Player #2 → [0][2]

Enter the amount of penalty time. Ex. For 2 minutes → [0][2] [0][0]

Press YES.

To Clear Penalty



Press **CLEAR PENALTY** to remove a penalty

Clear Penalty

1. Press  or  until the desired penalty is displayed
2. Press 

